FLEXSON
ACCESSORIES FOR SONOS


SAR-TVMA


support@flexson.com


A	B	C	D	E	F	G	H
M5 x4	M5 x4	x4	M5 x4	x4	M8x4	9° Tilt	M8 x4


EN Also required
FR Également requis
DE Ebenfalls benötigt
ES También se requiere

EN Assemble to suit your TVs VESA pattern
FR Assemblez en fonction du schéma VESA de votre TV
DE Montage passend zur VESA-Bohrung Ihres Fernsehers
ES Compatibilidad con interfaces de montaje VESA para su televisor

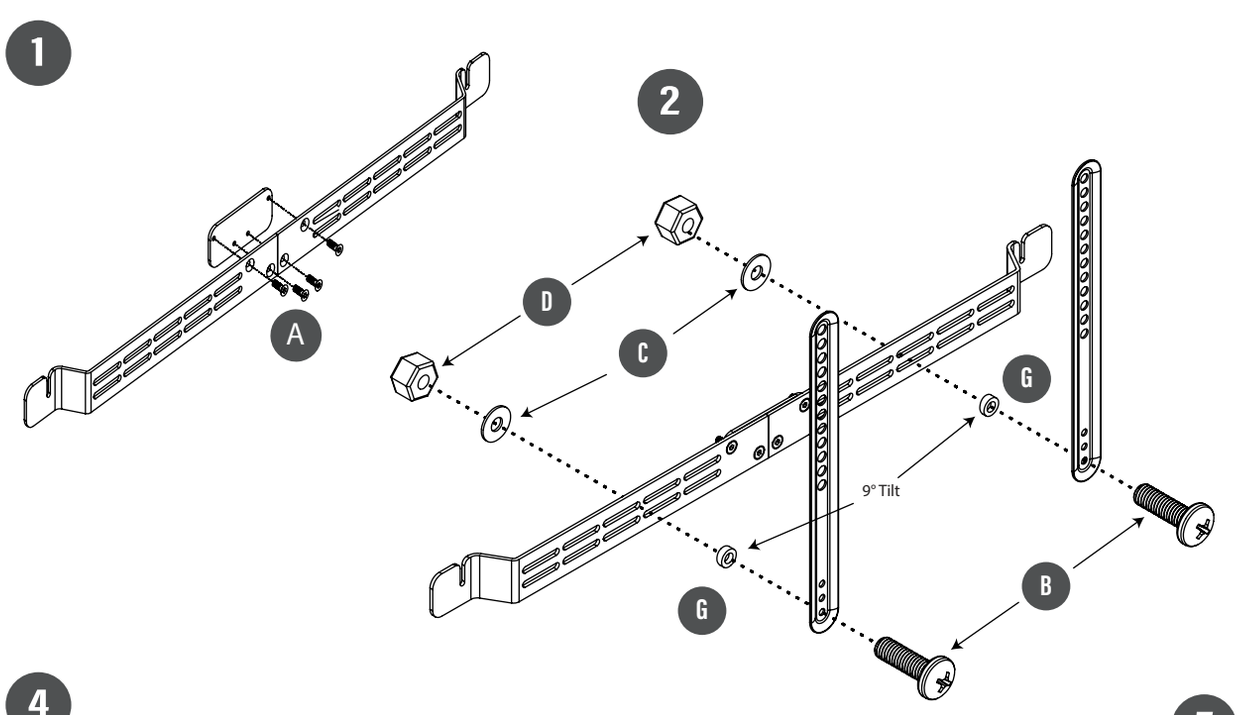

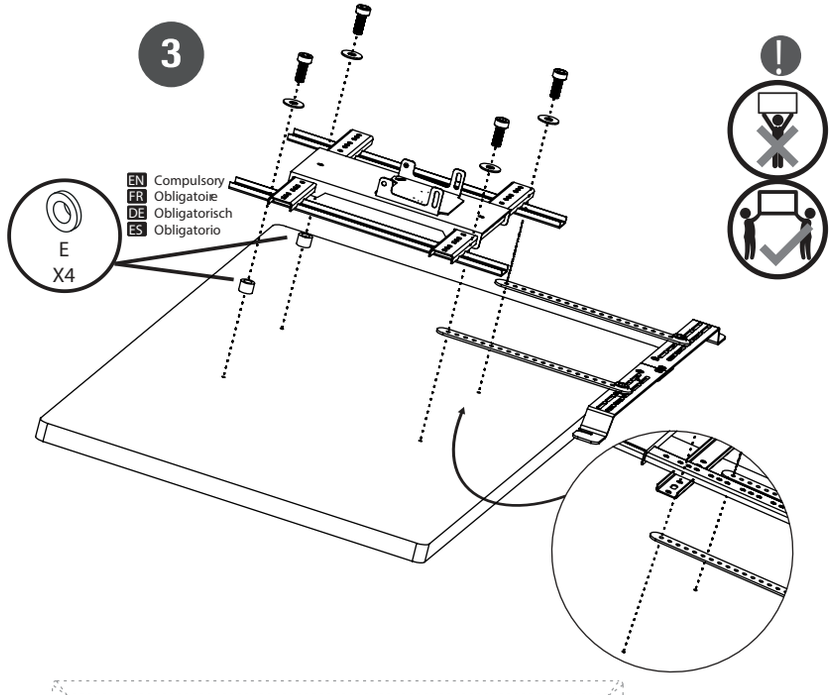

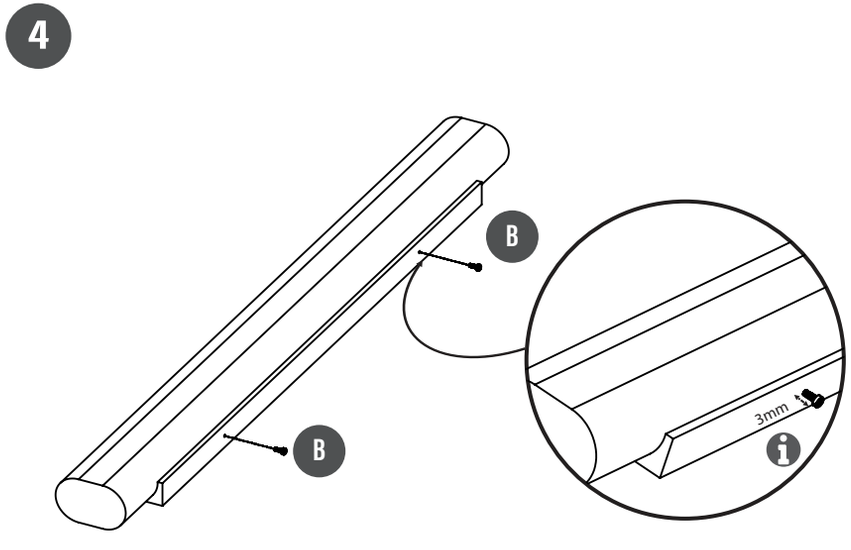

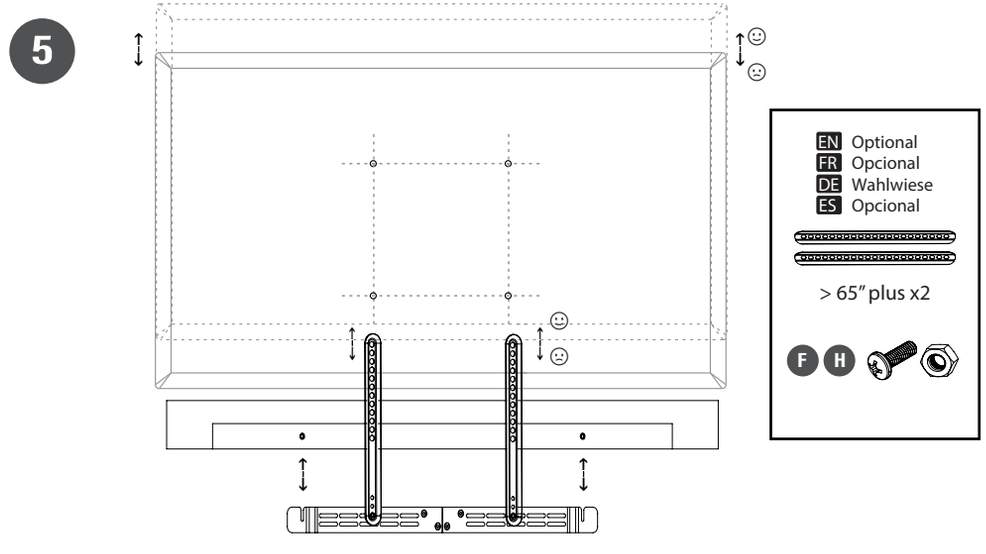

Exertis (UK) Ltd, St George House, Parkway, Harlow Business Park, Harlow, Essex, CM19 5QF, UK

support@flexson.com

IMPORTANT SAFETY INSTRUCTIONS – Retain for future reference: ENGLISH

FOR SONOS ACCESSORIES

IMPORTANT SAFETY INSTRUCTIONS – Retain for future reference:

When using the Flexson mounting system, basic precautions should always be followed, including the following:

- Read the installation instructions carefully before installation and keep them in a safe place. If the product is passed on to a third party, also pass on the assembly instructions.

- Always unplug the SONOS speaker from the electrical outlet before installing it onto the Flexson mounting system.

WARNING - To reduce the risks of burns, fire, electrical shock, or injury to persons:

- Unplug the SONOS speaker from the outlet before putting it on, taking it off, or cleaning.

- Use this mounting system only for the installation of the intended SONOS speaker.

- Avoid contact with moisture/liquid



CAUTION: This mounting system is intended for use only with SONOS products. Use with any other products may result in the collapse of the mount and its accessories, causing possible injury.

- To avoid risk of property damage or personal injury, follow only these instructions, do not alter, or modify the product from its original condition, and do not attempt to use or repair it if damaged.

- The mounting hardware included with this product is for use in wood stud or masonry applications only. The product must be installed into a wood stud or masonry. Do not attempt to install in drywall only. Always use the correct mounting accessories/fixings appropriate to the wall/surface being fixed to.

- The wall or ceiling must be rated to support at least five times this mass. Contact a qualified builder if you have any doubts as to the construction or integrity of your wall or ceiling.

- Installation requires the use of a power drill. Familiarize yourself with all necessary tools before installing the product and use adequate eye and other personal protection, or arrange for installation by a professional.

- The product and SONOS Speaker are not intended to support the weight of other objects. Once installed, do not hang other objects on the product or SONOS Speaker.

- The product is for use with SONOS Speaker only. Exertis (UK) Ltd is not responsible for mishandling, improper installation, or use with any device other than the specified product.

WARNING: Use correct replacement fixings for each FLEXSON wall mount or ceiling models.

For **ERA 100** Wall mount installations, ensure to use the specified fixings:

Rawl plug: OD 6*30

Screw: M4*45

For **All other model's** installations, ensure to use the specified fixings:

Rawl plug: OD8*40

Screw: M5*50

ADDRESSES:

Manufactured by Exertis UK Ltd. Technology House Magnesium Way, Hapton, Burnley, England, BB12 7BF

EMAIL: customer.services@exertis.co.uk

ECONOMIC OPERATOR:

Exertis Supply Chain Services Limited, Unit 21 Fonthill Business Park, Clondalkin, Dublin 22, D22 FR82. Dublin, Ireland

EMAIL: SCSGPSR.UK@exertis.com